




Exploded View and Replacement Parts

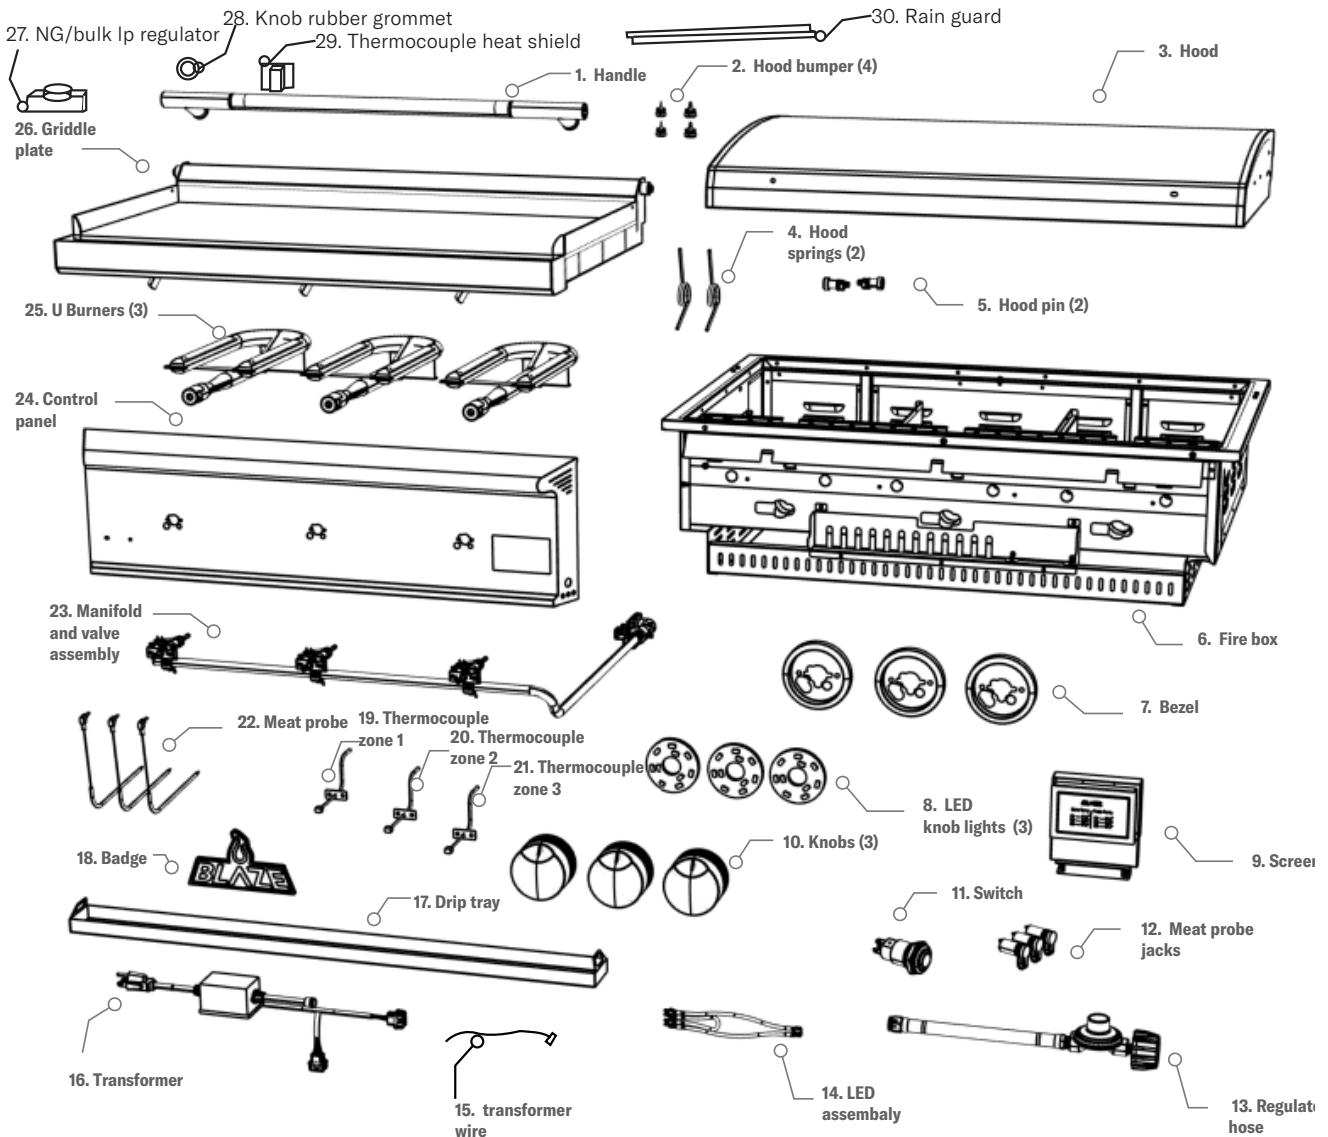

Blaze Part Number: Reference Guide					
1.	BLZ-GRIDDLE40-003	10.	BLZ-GRIDDLE40-011	19.	BLZ-GRIDDLE40-015
2.	BLZ-32-012W	11.	BLZ-LTE3-018	20.	BLZ-GRIDDLE40-016
3.	BLZ-GRIDDLE40-004	12.	BLZ-GRIDDLE40-014	21.	BLZ-GRIDDLE40-017
4.	BLZ-GRIDDLELTE3-012	13.	BLZ-LP-HOSE/REG	22.	BLZ-LTEPRO-002
5.	BLZ-GRIDDLELTE-003	14.	BLZ-GRIDDLE40-002	23.	BLZ-GRIDDLE40-008
6.	NA	15.	BLZ-GRIDDLE40-012	24.	BLZ-GRIDDLE40-001
7.	BLZ-LTEPRO-008	16.	BLZ-PROPB-002	25.	BLZ-GRIDDLE-003
8.	BLZ-LTE3-001	17.	BLZ-GRIDDLE40-007	26.	BLZ-GRIDDLE40-009
9.	BLZ-GRIDDLE40-006	18.	BLZ-GRIDDLELTE-007	27.	BLZ-32-050
				28.	BLZ-LTE3-016
				29.	BLZ-GRIDDLE40-018
				30.	BLZ-GRIDDLE40-019